


NOTES:

1. PLANTING SOIL MIXTURE: BACKFILL WITH NATIVE TOPSOIL.
2. PLANTING PIT WILL BE THE SAME DEPTH AS THE ROOTBALL AND 300 WIDER AROUND DIAMETER OF ROOTBALL.
3. ROOT COLLAR OF PLANT WILL BEAR SAME RELATIONSHIP TO FINISHED GRADE, AFTER SETTLEMENT, AS EXHIBITED IN NURSERY / POT.
4. IN HEAVY CLAY OR POORLY DRAINED SOILS, PLANT MATERIAL WILL BE INSTALLED SO THAT ROOT COLLAR IS 75-100 ABOVE ADJACENT FINISHED GRADE.
5. APPLY ADEQUATE WATER AND INSTALL MULCH IMMEDIATELY AFTER INSTALLATION OF PLANT MATERIAL.

DO NOT CUT LEADER

DETAIL A

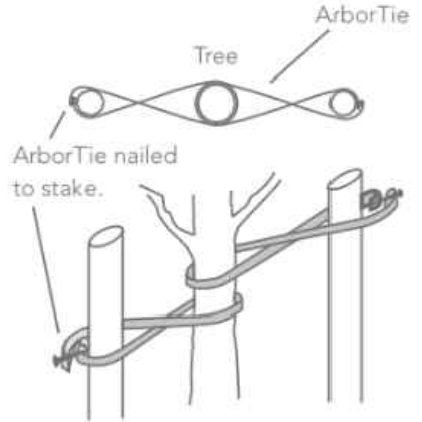

STAKE AND GUY
 THREE (3) WOOD STAKES - 50 x 50 x 2400
 WRAP ARBORTIE LOOSELY AROUND TRUNK OF TREE AND STAKES, ALLOWING MOVEMENT OF TREE. FOLD ENDS OF ARBORTIE BACK AND SECURE TO STAKE WITH 1" GALVANIZED ROOFING NAIL. (SEE DETAIL 'A' ABOVE)
 STAKES ARE TO BE SPACED EQUALLY AROUND THE TREE.


100 DEPTH PINE BARK MULCH (AFTER SETTLEMENT).
 KEEP MULCH 100 AWAY FROM TRUNK.

FINISHED GRADE

EARTHEN SAUCER
 100 HIGH x 200 WIDE
 INSTALL AROUND PERIMETER OF PLANTING PIT IMMEDIATELY SOAK SAUCER AFTER INSTALLATION

REMOVE WIRE BASKET, ALL ROPE, AND BURLAP FROM TOP 1/3 OF ROOTBALL BEFORE BACKFILLING PLANTING PIT

BACKFILL WITH NATIVE TOPSOIL

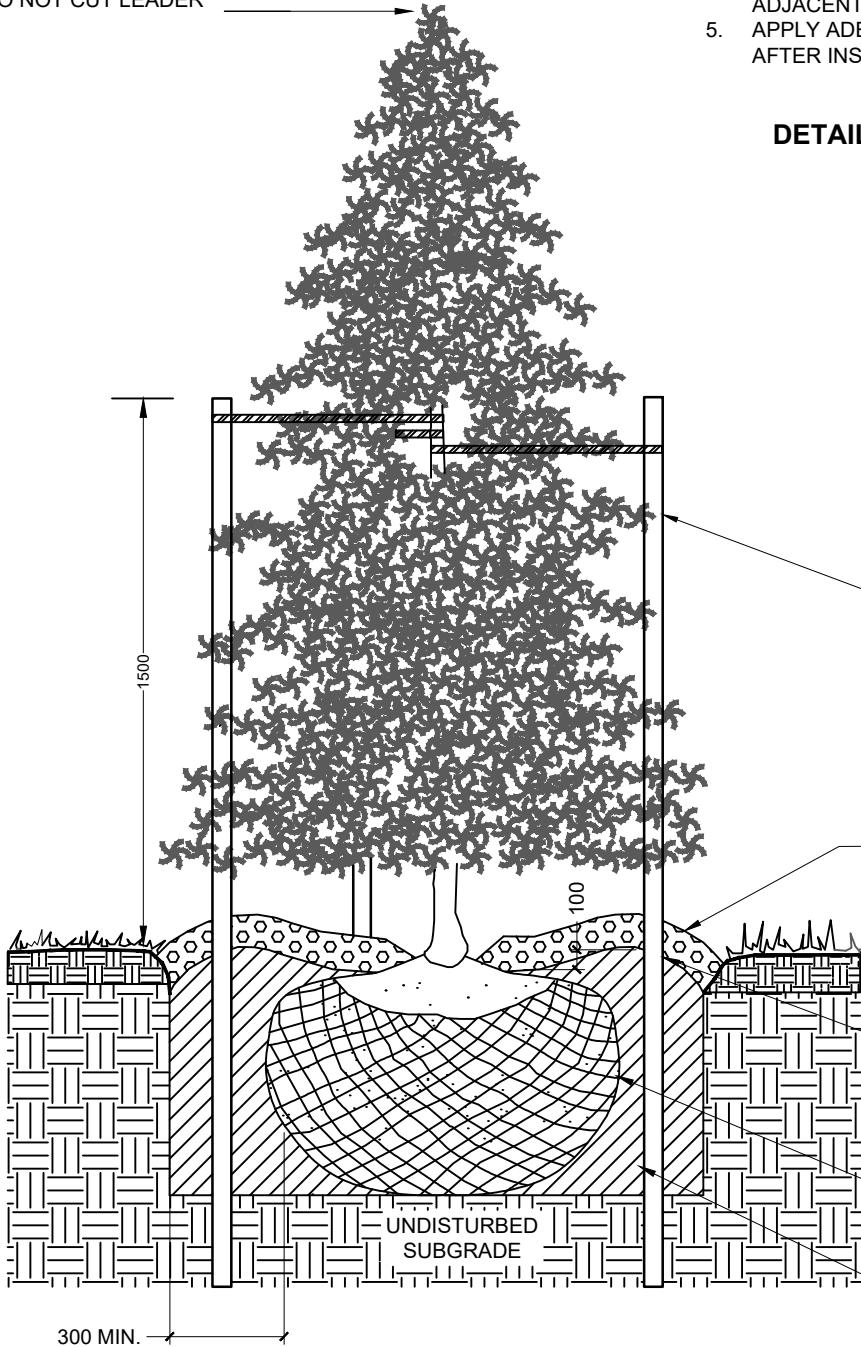

ALL DIMENSIONS ARE IN MILLIMETERS UNLESS OTHERWISE SHOWN.

STANDARD DRAWING

REV 1

MAY 2023

**PLANTING DETAIL
 CONIFEROUS TREE PLANTING**



CW-725